

# Break Away Connector



*Break Away Connector*



Tank Truck drivers must be educated to attach the grounding clamp and system to the designated earth point on the Tank Truck as soon as they leave the cab and before they start any other operation or product transfer (do not attach hoses, lower legs, etc).

After the product transfer and all other activities have been completed the driver can remove the earthing clamp and put it back on the earthing system stowage point before driving off.

Occasionally this simple process of removing and stowing the clamp and cable by the driver fails to be completed and the Tank Truck / is driven off taking the grounding clamp, spiral cable/ cable reel with it, causing extensive and expensive damage.

This type of incident also prevents any further use of this safety equipment until repaired.

Newson Gale have a new assembly to help mitigate this situation. The BAC Break Away Connector fits in line with the grounding clamp and cable. If the Tank Truck is driven off prematurely, the grounding clamp and the male half of the Break Away Connector (BAC) assembly separates from the remaining cable thus mitigating further damage to the installation.

This means that only the clamp and BAC assembly need to be replaced to enable the grounding equipment to be up and running again quickly.

The Break Away Connector will fit existing Earth-Rite® grounding systems fitted with quick connectors.

The Break Away Connector will not separate during normal operation but will separate if a drive off occurs mitigating damage to other system components.

# Break Away Connectors

## Health and Safety Update

A separate "Health and Safety Warning Caution when using the Break Away Connector (BAC)" sheet will be issued with every quotation for the product. Please read and fully understand its contents before purchasing and using this product.


**Caution when using the BAC:** Please be aware that if the Tank Truck / Road Tanker is driven off - with the clamp and cable still attached - and the BAC assembly separates, the remaining end of the straight cable can fly back towards the point of where it is installed (although this happens anyway without the BAC fitted).

This could be a Health and Safety hazard and needs to be fully understood and assessed by the user before purchase/installation.

## Routine Maintenance Requirements

Please apply petroleum jelly to the inside of the joint between the male and female connectors highlighted by the two RED arrows in the photograph below.

This will assist the Break Away Connector separate more easily when required.

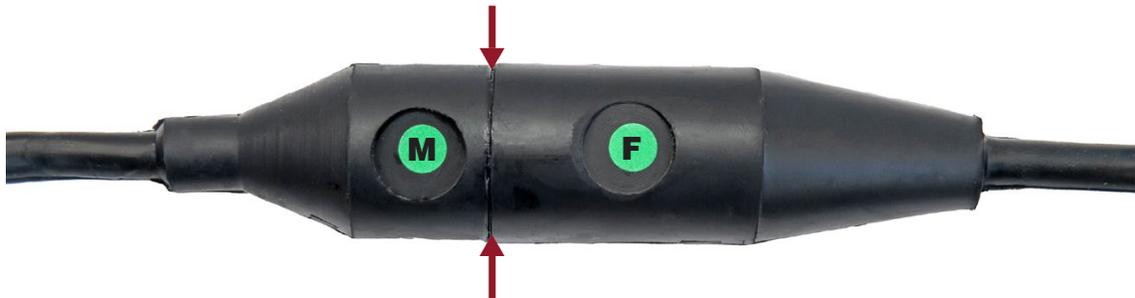

### Copyright Notice

The website and its content is copyright of Newson Gale Ltd © 2020. All rights reserved.

Any redistribution or reproduction of part or all of the contents in any form is prohibited other than the following:

- you may print or download to a local hard disk extracts for your personal and noncommercial use only
- you may copy the content to individual third parties for their personal use, but only if you acknowledge the website as the source of the material

You may not, except with our express written permission, distribute or commercially exploit the content. Nor may you transmit it or store it in any other website or other form of electronic retrieval system.

### Right to change

This document provides general information only and may be subject to change at any time without notice. All information, representations, links or other messages may be changed by Newson Gale at any time without prior notice or explanation.

Newson Gale is not obliged to remove any outdated information from its content or to expressly mark it as being outdated. Please seek the advice of professionals as necessary regarding the evaluation of any content.

### Disclaimer of liability

The information provided in this Datasheet is provided by Newson Gale without any representations or warranties, expressed or implied, as to its accuracy or completeness. The liability of Newson Gale for any expenses, losses or actions incurred whatsoever by the recipient as a result of the use of this Datasheet shall be excluded.

Leading the way in hazardous area static control



[www.newson-gale.com](http://www.newson-gale.com)

2/2

United Kingdom  
Newson Gale Ltd  
Omega House  
Private Road 8  
Colwick, Nottingham  
NG4 2JX, UK  
+44 (0)115 940 7500  
[groundit@newson-gale.co.uk](mailto:groundit@newson-gale.co.uk)

United States  
IEP Technologies LLC  
417-1 South Street  
Marlborough, MA 01752  
USA  
+1 732 961 7610  
[groundit@newson-gale.com](mailto:groundit@newson-gale.com)

Deutschland  
IEP Technologies GmbH  
Kaiserswerther Str. 85C  
40878 Ratingen  
Germany  
+49 (0)2102 58890  
[erdung@newson-gale.de](mailto:erdung@newson-gale.de)

NG US BAC 310322 R2